

<b>Yaesu VX-8R 50/144/430 Triband Transceiver</b>	
<b>Storing A Frequency In Memory</b>	
Select Operating Band	Press <b>[A BAND]</b> for upper or <b>[B BAND]</b> for lower.
Select VFO Mode	Press <b>[V/M]</b>
Enter Frequency	Direct enter the frequency using buttons or by turning <b>DIAL</b>
Select Offset (if not in Automatic Repeater Shift)	Press <b>[F/W]</b> then <b>[6MNO]</b> shortcut to SET MODE item <b>75 RPT SHIFT</b> Rotate <b>DIAL</b> to select <b>-RPT</b> , <b>+RPT</b> , or <b>SIMPLEX</b> . Press <b>PTT</b> to save and exit to normal operation
Set Tone (CTCSS)	Press <b>[F/W]</b> then <b>[MODE]</b> , shortcut to SET MODE item <b>95 SQL TYPE</b> Rotate <b>DIAL</b> to select <b>TONE</b> , <b>TSQL</b> , <b>DCS</b> , or others.
Select Tone Frequency	With <b>SQL TYPE</b> set to <b>TONE</b> or <b>TSQL</b> , press <b>[MODE]</b> to accept. Press <b>[F/W]</b> , then <b>[2ABC]</b> , shortcut to SET MODE item <b>99 TONE FREQUENCY</b> . Rotate <b>DIAL</b> to select desired tone frequency. Press <b>[2ABC]</b> to save setting and exit to normal operation.
Store in Memory Channel	Press <b>[F/W]</b> for 1 second. <i>Next empty memory channel number blinks.</i> Within 5 seconds of releasing <b>[F/W]</b> : Rotate <b>DIAL</b> to select memory channel and/or Press <b>[F/W]</b> to save in memory
Select Memory Mode	Press <b>[MR]</b>
<b>Other Operations</b>	
Recall Memory Channel By Channel Number	When in memory mode, enter desired channel number and press <b>[V/M]</b>
Copy Memory to VFO	Press <b>[F/W]</b> , <b>[VFO]</b>
Set Transmit Power	Press <b>[F/W]</b> . Press <b>[WIRES]</b> to cycle thru power settings, <b>L1</b> , <b>L2</b> , <b>L3</b> , <b>HI</b> . <i>Note: WIRES is the atomic symbol.</i>
Lock the Keyboard	Press the power button momentarily. Repeat to unlock
Memory Bank Recall	Press <b>[V/M]</b> to return to select Memory mode, if required. Press <b>[BAND]</b> to activate Memory Bank mode. <b>MR</b> will be replaced with a memory bank number ( <b>B 1</b> thru <b>B 24</b> ). Press <b>[F/W]</b> and rotate <b>DIAL</b> to select desired memory bank. To change memory banks, press <b>[F/W]</b> , <b>[BAND]</b> , and rotate <b>DIAL</b> to select desired memory bank. Press <b>[BAND]</b> to exit Memory Bank mode
Single Band Operation	Select operating band <b>[A BAND]</b> or <b>[B BAND]</b> . Press desired operating band button for 1 second. While in Single Band Operation, pressing the selected band button changes the display size. Pressing the other band button will swap to the other band.
Weather	Press <b>[A BAND]</b> . Press <b>[F/W]</b> and then <b>[9WXYZ]</b> Press <b>[BAND]</b> repeatedly until <b>WX CH</b> . Rotate <b>DIAL</b> to select desired Weather Broadcast channel. Press <b>[V/M]</b> to exit
Volume Adjustment	Press <b>[VOL]</b> and turn <b>DIAL</b> to desired volume setting Pressing <b>[F/W]</b> and then <b>[VOL]</b> shifts the <b>DIAL</b> to volume control. Repeat to return <b>DIAL</b> to frequency control.
WA6BJY 2/6/11	