

Yaesu FT-60R Transceiver	
Storing A Frequency In Memory	
1. Select VFO Mode	Press [V/M]
2. Enter Frequency	Press [F/W] . Direct enter the frequency
3. Enter Manual Repeater Offset Activation & Select	Press [F/W] [WIRES 0 (SET)] . Rotate DIAL to Set Item #38, RPT.MOD Press [F/W] . Rotate DIAL to RPT.- , RPT.+ , or RPT.OFF <i>Note: WIRES is the atomic symbol on the 0 button.</i>
4. Activate Tone	Press [F/W] [1(SQ TYP)] . Rotate DIAL to TONE or TSQL Press [F/W]
5. Select Tone Freq	With TONE or TSQL selected, Press [F/W] and then [2(CODE)] Rotate DIAL to desired tone frequency Press [F/W] to accept.
6. Store in Memory Channel	Press [F/W] for 1 second and release. <i>Next empty memory channel number blinks.</i> Within 5 seconds of releasing [F/W] : Rotate DIAL to select memory channel and/or Press [F/W] to save in memory
7. Select Memory Mode	Press [V/M]
Other Operations	
Clear Memory Channel	Select the memory channel to be deleted. Press [F/W] for 1 second and release. Press [HM/RV] . Display reverts to memory channel #1 and previously selected memory channel is deleted.
Copy Memory to VFO	Select memory channel to be copied . Press [BAND] momentarily. Press [BAND] for 1 second.
Shift between Numeric and Alpha Display	Press [BAND] momentarily. Repeat to shift back again.
Set Power	Press [F/W] Press [3(TX PO)] . Rotate DIAL to select HIGH , MID , or LOW power. Press [PTT] to save setting.
Lock the Keyboard	Press [F/W] and then [WIRES 0 (SET)] to enter SET Mode Rotate DIAL to select Set Mode item #25: LOCK . Press [F/W] and then rotate DIAL to select lock combination desired. Press [PTT] to enable selection. Press and hold [6(LOCK)] . The padlock icon will appear. <i>Note: WIRES is the atomic symbol on the 0 button.</i>
Unlock the Keyboard	Press and hold [6(LOCK)] . The padlock icon will disappear.
Select Operating Band	Press [BAND (BAND DOWN)] to select the band you want to display. Indicated band will increase. To move downward, first press [F/W] .
Weather Broadcasts	Press [1(SQ TYP)] for 1 second and rotate DIAL to select desired weather station. Press [V/M] or press and hold [1(SQ TYP)] for 1 second to exit.
Label Memory	Recall desired memory channel Press [F/W] , then [WIRES 0(SET)] Rotate DIAL to Set Mode Item #28: NM WRT Press [F/W] to view previously stored label, if any. Press [F/W] to clear previously stored label, if any. Rotate DIAL to select first character of label Press [F/W] to select next character. Press [▼(MHz)] to backspace. A total of six characters is allowed. Press [PTT] when done.
Disable WIRES	Press the [F/W] then immediately press [WIRES 0(SET)] to enter the menu mode. Rotate DIAL to menu 23 – INT MR . Press [F/W] then rotate DIAL to select a memory (d1 thru d9) that is empty, i.e. it contains (six dots, equates to no tone) Press the [F/W] key to store the setting. Rotate DIAL to menu 21 – I NET . Press [F/W] then rotate DIAL to select INT.MEM . Press [F/W] to store the setting. Press the [PTT] button to exit the menu mode.
WA6BJY 2/11/11	