

## Quick Reference for Baofeng UV5R – Courtesy of KB6BXD

**To program repeater 146.985, minus 600 Hz offset, 100 Hz CTCSS tone, low power level, wide band transmit, into Channel #010**

Turn on radio. Radio will announce *Frequency Mode* or *Channel Mode*. If required, press VFO/MR to enter Frequency Mode. If required, Press A/B to select upper display and Press BAND to choose the VHF range instead of UHF range. Turn off dual-watch. MENU + 7 + MENU. Use the ▲ ▼ key to select OFF. Press MENU + EXIT

**Press** [MENU] + 1 + [MENU]  
Press [MENU] + [EXIT]

**Enter** 146.985

**Press** [MENU] + 25 + [MENU]  
Press [MENU] + [EXIT] **Press**  
[MENU] + 26 + [MENU]

Press [MENU] + [EXIT]

**Press** [MENU] + 1 + 3 + [MENU]

Press [MENU] + [EXIT]

**Press** [MENU] + 2 + [MENU]  
Press [MENU] + [EXIT]

**Press** [MENU] + 5 + [MENU]  
Press [MENU] + [EXIT]

Use the ▲ ▼ key to select 5 KHz Step  
To accept and exit

The receive frequency

Use the ▲ ▼ key to select Minus Offset (-)  
To accept and exit

Use the ▲ ▼ key to select 00.600 Hz Offset  
Or use Keypad and enter 00.600 Hz Offset  
To accept and exit

Use the ▲ ▼ key to select 100.0 Hz Tone  
Or use Keypad and enter 100.0  
To accept and exit

Use the ▲ ▼ key to select Low Power  
To accept and exit

Use the ▲ ▼ key to select Wide Bandwidth  
To accept and exit

### Radio should now operate the repeater if in range

**Press** [MENU] + 2 + 7 + [MENU]  
Press [MENU] + [EXIT]

**Press** [\*SCAN] (quick press)

**Press** [MENU] + 2 + 7 + [MENU]  
Press [MENU] + [EXIT]

Enter 010 or Use the ▲ ▼ key to select 010  
This stores the Receive Frequency

Display will show Transmit Frequency

Enter 010 (if required)

This stores the Transmit Frequency