

BADGE SIZE CARDS CARRIED WITH ID BADGES

VFTOM QUICK REFERENCE CARDS – Courtesy of WA6RUZ

VX-5 VFTOM

- (V)- Press [VFO] key, displays Va or Vb
- (F)- Use Keypad to input the Frequency **6-digits**
- (T)- Press [FW] then [1 (TN)FREQ], =Menu-29, rotate [DIAL] to select **TONE**, Press [BAND (set)AR], rotate [DIAL] to **Menu-30 (TONE SET)**, press [BAND (set)AR], rotate [DIAL] select **Tone Frequency**, press [2 (cd)TAG] key to save & exit.
- (O)- Press [FW] then [6 (RP)ONT] key, = **Menu-07** Rotate [DIAL] display - + or **SIMP**, press [PTT] to save.
- (M)- Press [FW] for **1 second**, within 5 seconds, rotate [DIAL] to Memory # **slot**, Press [FW] to **SAVE**.

VX-8DR VFTOM

- (V)- Press [VFO] displays VFO
- (F)- Use Keypad to input the Frequency **6-digits**
- (T)- Press [F/W] then [MODE], rotate [DIAL] to select **TONE**, Press [PTT], to save. Press [F/W] then [2/CODE], rotate [DIAL] to select **Tone Frequency**, press [2/CODE] to save.
- (O)- Press [F/W] then [6/RPT] Rotate [DIAL] to select **+RPT -RPT or SIMPLEX**, press [PTT] to save.
- (M)- Press [F/W] for **1 second**, within 5 seconds, rotate [DIAL] to Memory # **slot**, Press [F/W] to **Save**.

FT-8800 VFTOM

- (V)- Press [V/M] displays VFO
- (F)- Use Microphone Keypad, input Frequency **6-digits**
- (T)- Press [SET] (*bottom center button*), rotate [Main DIAL] to **Menu-41 (TONE.M)**, press [Main DIAL] to select, Rotate [Main DIAL] select **ENC (encode)**, press [Main DIAL] to select. Rotate [Main DIAL] to **Menu-40**, Press [Main DIAL] to select, rotate [Main DIAL] selecting the **TONE Frequency**, press [Main DIAL] **½ second** to save.
- (O)- Press [SET] (*bottom center button*), rotate [Main DIAL] to **Menu-33 (REP.MOD)**, press [Main DIAL] to select, Rotate [Main DIAL] selecting - + or **OFF**, Press [Main DIAL] **½ second** to save.
- (M)- Press [SET] (*bottom center button*) **½ second (Memory Blinks)** Rotate [Main DIAL] to Memory # **slot**, press [SET] to save.

FT-90 VFTOM

- (V)- Press Microphone [VFO/MR] key to select.
- (F)- Use microphone Keypad, input Frequency **6-digits**
- (T)- Press microphone [P1] repetitively until **ENC** is displayed When selected, press the microphone [UP] or [DWN] to select **TONE Frequency**, then wait for the display to return to normal.
- (O)- Press [→] key on front panel toggles - + or **SIMP**, press [PTT] to save.
- (M)- Press and Hold microphone [VFO/MR] for **1 second**, within 5 seconds, press Microphone [UP] / [DWN] to select Memory # **slot**, Press [VFO/MR] to **SAVE**.