

Quick Reference Cards for Yaesu Radios, courtesy W5JCK

Yaesu VX-6R: Memory Storage
Press V/M for VFO mode , tune the receive frequency.
Press F/W then SET to enter Set mode .
Set tone mode via Menu 60 SQL.TYP . Set tone frequency via Menu 66 TN FRQ .
Press PTT to save settings and exit Set mode .
Press and hold F/W for one second, turn to desired memory channel, press F/W again to store frequency.

Yaesu VX-6R: Miscellaneous Operations
TX Power: Press F/W then TX PO to change level.
Rev TX/RX: Press HM/RV (if Menu 28 is set to REV) or press F/W then HM/RV (if Menu 28 is set to HOME)
PRI channel: Press and hold F/W for one second, turn to desired memory channel, press BAND .
Dual Watch: Press and hold DW for one second.
Lock Keypad: Press and hold LK for one second.

Yaesu FT-7800R: Memory Storage
Press V/M for VFO mode , tune the receive frequency.
Press and hold SET for ½ second to enter Set mode .
Set tone mode via Menu 42 SQL.TYP . Set tone frequency via Menu 44 TN FRQ .
Press and hold SET for ½ second to exit Set mode .
Press and hold V/M for ½ second, turn to desired memory channel, press V/M again to store frequency.

Yaesu FT-7800R: Miscellaneous Operations
TX Power: Press LOW to change level.
Rev TX/RX: Press and hold HM/RV (if Menu 16 is set to REV).
PRI channel: Store the frequency for the Priority Channel into Memory Channel 1.
Dual Watch: Press and hold MHz for ½ second.
Lock Keys/Buttons: Set using Menu 21 Lock .

Yaesu FT-8800R: Memory Storage
Press V/M for VFO mode , tune the receive frequency.
Press SET to enter Set mode .
Set tone mode via Menu 41 TONE M . Set tone frequency via Menu 40 TONE F .
Press and hold DIAL for ½ second to exit Set mode .
Press and hold SET for ½ second, turn to desired memory channel, press SET again to store frequency.

Yaesu FT-8800R: Miscellaneous Operations
TX Power: Press LOW to change level.
Rev TX/RX: Press right REV(V/M) (if Menu 20 is set to KEY2).
PRI channel: Store the frequency for the Priority Channel into Memory Channel 1.
Dual Watch: Press and hold HM for ½ second.
Lock Keys/Buttons: Set using Menu 21 Lock .

Instructions: Print on a heavy card-stock paper. (Paper designed for printing photos will work well.) Cut out each (side-by-side) pair, then fold over so that Memory Storage appears on one side and Miscellaneous Operations appears on the other. Laminate and trim to the size of a credit card. It is now easily carried in your wallet or even in your ID badge holder.